



SUMMIT
AUTOMATION
Bringing Doors to Life!®

Summit Automation provides the best door and window automation systems in the world with exceptional Customer care.

Interior Control Options Matrix

Interior Control Option Functionality	Instructions	12-in-1	9-in-1	6-in-1	3-in-1	Wireless W.S	Hand Wave	Remote
Hard Reset	Press & hold unlock until you get rapidly flashing red and blue lights; Press open and close at the same time.	—	—	✓	✓	✓	—	—
	Scroll to Features page; press and hold the symbol or in between the navigation arrows.	—	✓	—	—	—	—	—
	Click on the “gear” symbol at the bottom of the screen; Scroll over to “Settings Page 2”, and press & hold the “Hard Reset” for 10-12 seconds or until the screen pages to the “Programming” screen	✓	—	—	—	—	—	—
Soft Reset	Press & hold the “stop” button until you get rapidly flashing red and blue lights; press “close”	—	—	✓	✓	✓	—	—
	Scroll over to the diagnostics page; Press & hold the “System Reset” button until the button turns green	—	✓	—	—	—	—	—
	Click on the “gear” symbol at the bottom of the screen; Scroll over to “Settings Page 2”; scroll over to settings	✓	—	—	—	—	—	—
	Power is naturally regained at the control box, or Manual power cycle at the control box. Press “Close” on the touchscreen or wall switch	✓	✓	✓	✓	✓	—	✓
Auto-Open/ Party Mode	Press & hold open and unlock until you get rapidly flashing lights	—	—	✓	✓	✓	—	—
	Scroll over to the features page; press the “Auto-Open” button	—	✓	—	—	✓	—	—
	Click on the “gear” icon at the bottom of the screen; Press on the “Party Mode” button on Settings Page 1	✓	—	—	—	—	—	—
Self-Close/ Close Behind	Press & hold stop and unlock until you get rapidly flashing lights	—	—	✓	✓	—	—	—
	Scroll over to the features page; press the “Self-Close button” the button should turn green	—	✓	—	—	—	—	—
	Click on the “gear” icon at the bottom of the screen; Press on the “Close Behind” button on Settings Page 1	✓	—	—	—	—	—	—
Self-Lock/ Self-Locking Delay	Press & hold stop and unlock until you get rapidly flashing lights	—	—	✓	✓	—	—	—
	Click on the “gear” icon at the bottom of the screen; Press on the “Self-Locking Delay” button on	✓	—	—	—	—	—	—
Proximity	Scroll over to the Features page, and select proximity (Only works when used for the auto open/self-close feature)	—	✓	—	—	—	—	—
	Click on the “gear” icon at the bottom of the screen; Press on the “Close Behind” button on Settings Page 1	✓	—	—	—	—	—	—
	Enables automatically when auto-open/self-close is activated	—	—	✓	—	—	✓	—

Timer	Select the "Clock" icon on the bottom of the screen	✓	—	—	—	—	—	—
	Scroll over to the Timers page; select proximity (Only works when used for the auto open/self-close feature)	—	✓	—	—	—	—	—
	After enabling self-close/Auto-open; press 1,2,3, or 4 after within a 5 second period (Red and blue lights will be flashing or that 5 second period)	—	—	✓	—	—	—	—
VCM	Select "Gear" icon; go to settings page 2 and select VCM	✓	—	—	—	—	—	—
New User Page	Select "Gear" icon; go to settings page 2 and New User Page	✓	—	—	—	—	—	—
Rename Page	Select "Gear" icon; go to settings page 2 and select Rename Page	✓	—	—	—	—	—	—
Toggle Words/Icons	Select "Gear" icon; go to settings page 2 and select Toggle Words/Icons	✓	—	—	—	—	—	—
Normal/Extended Screen	Select "Gear" icon; go to settings page 2 and select Normal/Extended Screen	✓	—	—	—	—	—	—
Guest Mode	Select "Gear" icon; go to settings page 2 and select Guest Mode	✓	—	—	—	—	—	—
Background Page	Select "Gear" icon; go to settings page 2 and select Background Page	✓	—	—	—	—	—	—

Control Options	Hard Reset	Soft Reset	Auto-Open/Party Mode	Self-Close/Close Behind	Self-Locking Delay	Proximity	Adjust. Proximity	Timer	VCM	New User Page	Rename Page	Guest Mode	Background Page	Normal/Extended Screen	Toggle Words/Icons
12-in-1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—
9-in-1	✓	✓	✓	✓	✓	✓	—	✓	—	—	—	—	✓	—	—
6-in-1	✓	✓	✓	✓	—	✓	—	✓	—	—	—	—	—	—	—
3-in-1	✓	✓	✓	✓	—	—	—	—	—	—	—	—	—	—	—
Wireless Wall Switch	✓	✓	✓	✓	—	—	—	—	—	—	—	—	—	—	—
Hand Wave	—	—	✓	✓	—	—	✓	—	—	—	—	—	—	—	—
Remote Fob	—	✓	—	—	—	—	—	—	—	—	—	—	—	—	—